

Magic Box

UNNATI 1 & UNNATI 2

User Manual



USER MANUAL - MAGIC BOX - UNNATI 1 & UNNATI 2

BOX CONTENTS



**Magic Box
Unnati 1 & Unnati 2**



**HDMI
Cable**



**Power
Adapter**



**User
Manual**



**Remote
Control**

Precautions

- **Protection against Power surge:** Unplug the equipment when not in use. Use Surge protecting Power strips.
- **Protection against Water:** Keep device in dry locations and avoid water contact.
- **Protection against Virus:** Use secured Wi-Fi. Use Google Play store only, to download Applications. Use two Applications provided on device, periodically- LINE Anti-virus and Auto RAM cleaner.

Disclaimer

The company is OTT hardware provider and does not take responsibility for any content (Software/ Apps/ games). Certain prominent applications have been pre-installed for ready reference. User is free to install/uninstall applications of own choice.

Magic Box may not be compatible with certain High end TV models (Ultra HD and above). Replacement warranty policy available, within 48 hrs of sale.

SETTING UP OF MAGIC BOX

- Connect the Magic Box to your TV via HDMI cable.
- Select same HDMI port, using Source / Input button in your TV Remote control unit.
- Insert two AAA size batteries, in the Remote-Control Unit.
- Connect the Power Adapter to Magic Box and plug into secure power source.
- Turn on the supply and wait for Magic Box to display its **Home screen**.

Unnati 1 & Unnati 2

- If your TV screen does not display Magic Box Home screen or is flickering then, Go to Settings, using Magic Box Remote control unit → Go to Display → Select HDMI → Then choose lower resolution from drop list. until the display becomes visible / stable.

MAGIC BOX CONNECTOR INFORMATION



1. USB 2.0 connector
2. Audio-Video connector
3. HDMI connector (TV connection)
4. LAN connector (Ethernet)
5. Power Adaptor connector (5V, 2A)
6. TF/SD card slot up to 64 GB
7. USB 2.0 * 3 connector



SD Card with connector

Configuring the Magic Box

Connect to Wi-Fi (U1 & U2)


- Go to Home Screen → Click on Menu button




- Click on the Settings Button




- Click on More Settings

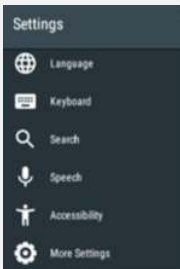

- In wireless Network
Click on Wi-Fi

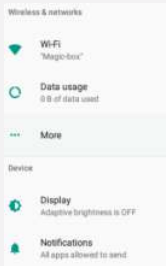

- Turn ON the Wi-Fi button

 

- It will show the available Wi-Fi networks in range



- Click on the Wi-Fi in your Office / Home and Enter password



- Once the connection is established, Magic Box will be connected to Wi-Fi



Accessing Applications

A. New Application installation


- To access Play store, YouTube, Google drive etc. user has to login with Gmail ID.

Sign in with Google account


- To sign-in a google account, user can go to Play store and Sign-in.




Fill your Gmail account user ID

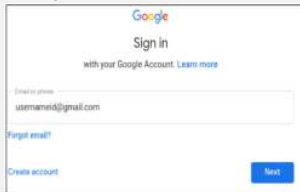

After this type your Password for your Gmail ID

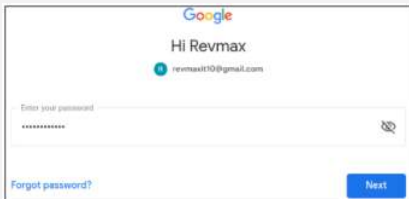

Press Accept and Your Gmail Account is Configured and Signed-in

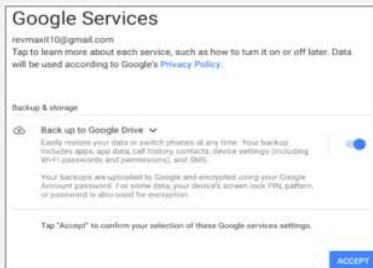


Installing an application from Play Store


- First Step is to go to Play store by clicking on the icon




- In the Play store, type the name of the Application, you want to install

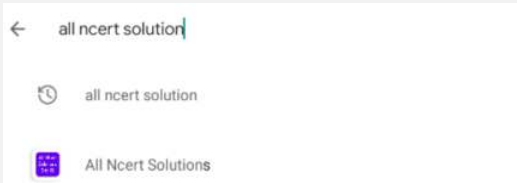

- Click on Install

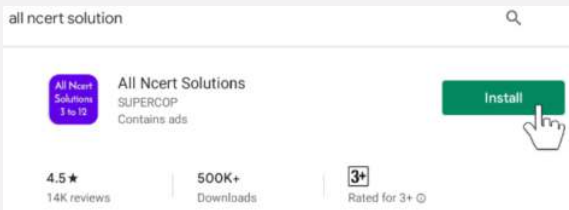

- Wait for the Application to download. . .
- Click on Open, to start the Application

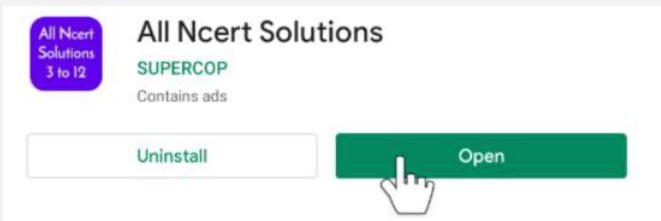

Please Note that some Applications are not available on Play store as they are not compatible /optimized for TV format

Opening new application, installed from Play Store

- Once the New application is installed, Go to Home screen and click on Menu button.
- Once in the Menu screen, user can see the newly installed Application icon. Just select the Application icon with your Remote and press OK. Refer adjacent snapshot.



B. Opening pre-installed applications, in Magic Box

The Magic Box comes with a variety of Applications installed on the device.


The Applications are categorized as




Entertainment




Education

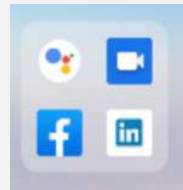

Social

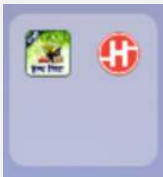

Fitness / Covid-19

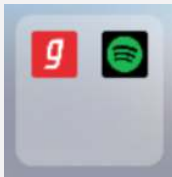

Music




Play Store APP


Also, Magic Box has the Play store application, from which user can download application of choice.

Opening pre-installed applications from play store

- In the Menu screen, user can see many folders of different Domains. User can select any of the Folder by selecting the folder icon with Remote and press OK. Refer adjacent snapshot.

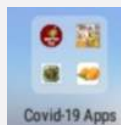

Covid-19 Apps

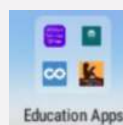


Education Apps

Once inside the folder, user can again click on the desired Application and start using it.

Some Apps might stall the box because of compatibility Issues. In such cases restart the Magic Box.

Remote functions UNNATI 1 & UNNATI 2

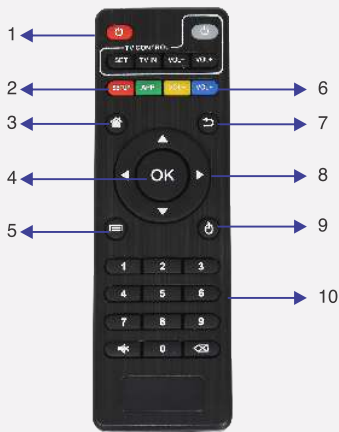

1. Power Button: Pressing once the Magic Box turns ON / Sleep mode. Long pressing for 3 seconds gives option of Power OFF / Restart.
2. Shortcut Button: Enables direct access to APP menu (Green) or Setting menu (Red).
3. Home Button: Return to Home Screen
4. OK button: Functions as Enter button. Where ever the remote cursor is pointing, the corresponding command is executed.
5. Menu button: Non-Functional.
6. Volume button: Increases / Decrease Volume.
7. Back Button: To get back to previous screen.
8. Navigation Button: Navigate through App Menu, Keyboard. Active both in Mouse ON/OFF mode.
9. Remote cursor ON/OFF:
In ON mode, the remote cursor is visible on the screen which enables selected function / key.
In OFF mode, the remote cursor is disabled. Necessary to scroll through Apps and documents.
10. Numeric pad: used to Directly key in the numbers. (like password).

Installing Batteries

- Insert two AAA size Batteries as per + and – terminals.

Important Note:

- If for any reason the Magic Box is not responding then press the Home button of remote to come to home page.
- In Remote cursor OFF mode, to access Applications on next / previous page, scroll using navigation buttons to the extreme end of Application screen.
- For closing multiple active Applications, long press the home button and close the Applications while in Remote cursor OFF mode.
- The TV control Keys are not used for magic Box

Warranty Policy

1. **Free Replacement / Refund, if TV compatibility issue reported, within 48 hrs of sale.**

- o Will be entertained only if the packaging is in-tact.
 - A. Replacement with Magic box which is compatible with TV set, by paying according to the MRP of new product, if available in stock.
 - B. Else, Refund will be provided if stock not available.

2. **Free Repair, within 12 months from date of installation.**

Warranty covers defects arising under normal circumstances and does not include malfunctions / failures arising from Physical damage, Exposure to water, Power brown out, Power fluctuations, Virus induced from unauthenticated content download or Acts of nature.

- o Any modifications or tampering in Magic Box will void the warranty. Magic Box team, will analyze and declare final cause of defect. This declaration will define warranty applicability.

Warranty requirements

- Copy of Invoice.
- Magic Box with QR code sticker, on rear side.
- Non-functional Magic Box unit, to be sent to Repair center, at listed address.
 - o In warranty units, will be repaired and sent back via courier.
 - o Out of warranty units will not be repaired.

Customer support

- Customer support is available at Toll free number: 18002678466
Monday to Saturday from 10 am to 7 pm.
 - The Customer support is for warranty related only and not for technical support Issues.
 - Help Videos for Application installation related procedure is available on our web site. To be referred for any Application related Issues.
- www.magicbox.online